
MANUAL

AUDIOGUIDE CHARGER

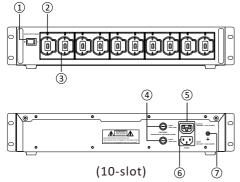

Illustration

- (1) Power switch and power indicator
- (2) Charging indicator
- 9 Power output connector
 9 Power input connector
- ③ Charging slot
- (4) Fuse

(7) Grounding

Instructions

- ① Power ON : Red indicator; Power OFF : indicator OFF
- (2) Charging : Blue charging indicator
- Fully charged : charging indicator OFF Charging error : blinking indicator
- (3) 10-slot : 10 charging pockets for audioguide 20-slot : 20 charging pockets for audioguide
- (4) 10-slot charger : AC 250 V, 2 A 20-slot charger : AC 250 V, 3 A
- (5) Supplying power to another charger with a connective cable

※10-slot charger: maximum 6 chargers in a daisy chain.※20-slot charger: maximum 3 chargers in a daisy chain.

- 6 AC 100 240 V, 50/60 Hz
- (7) Ground the device when required

Operation

Power ON


- Connect power cord with mains.
- Switch it on and observe if the charger will perform a charging test or not charging indicators will light in Blue for about 2 seconds.

Charging

- Allocate aduioguide into charging pockets.
- Charging indicators will light in Blue; indicator on audioguide will light in Red.
- When there is a blinking indicator on audioguide, the charging is not performed. Please refer to troubleshooting or find local dealer for repair if you are unable to sort it out.
- Fully charged = charging indicators OFF = Green indicator (audioguide).

Troubleshooting

- Q.Charging indicator is OFF when audioguide allocated onto charging pockets
- A.Make sure charging contacts are not covered with dust, not deformed, or the battery is actually at full capacity.

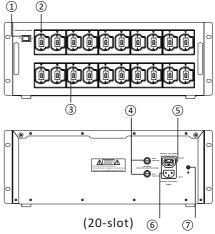

Troubleshooting

- Q. Indicator blinks in blue
- A. Make sure audioguide is on charging mode, not data uploading mode. Please refer to audioguide manual for further details.
- Q. Power/charging indicator is OFF when powered on
- A. Make sure power cord and fuse are installed or connected well.

Warning

- % Keep this charger away from any heat source and allocated with good ventilation. Do not leave it under sunlight or close to heater.
- % Clean charging contacts regularly to prevent contact failure caused by dust.
- % Use power supply that comes with original package only.
- ※ Improper squeeze or remove is not allowed.
- ※ Do not open charger enclosure in case of electronic shock.
- ※ Do not connect outnumbered chargers in a daisy chain.

Specifications

Charger	10-slot	20-slot	
Charging pockets	10	20	
	Blue = charging		
Charging indicator	Blinking = error		
	Off = fully charged		
Charging current	330 mA, per pocket		
Charging time	5-6 hours, based on Lithium 1200 mAh		
Required power	AC 100-240 V, 50/60 Hz, 8-4 A		
Rated charger no.	6, per daisy chain	3, per daisy chain	
Ambient temp.	-10 °C ~ 50 °C		
Fuse	AC 250 V, 2 A	AC 250 V, 3 A	
Dimensions (DxWxH)	237x482x88.4	237x482x177	
Weight	3.6 kg	5.1 kg	

X Specifications are subject to change

 
MANUAL

 
AUDIOGUIDE CHARGER

Installation for multiple chargers


Follow illustration below to connect and expand chargers on demand.


💥 For safety purpose, link chargers within rated number only. (find rated charger mix below for your referral.)







(power connective cord)

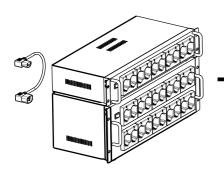

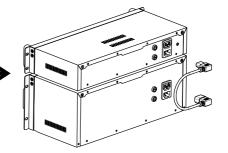

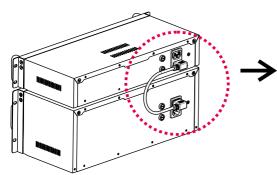

 



Rated Charger Mix

Charger Mix	10-slot	20-slot
А	0	3
В	1	2
С	2	2
D	3	1
E	4	1
F	5	0
G	6	0

X Specifications are subject to change